


SHARP

Important

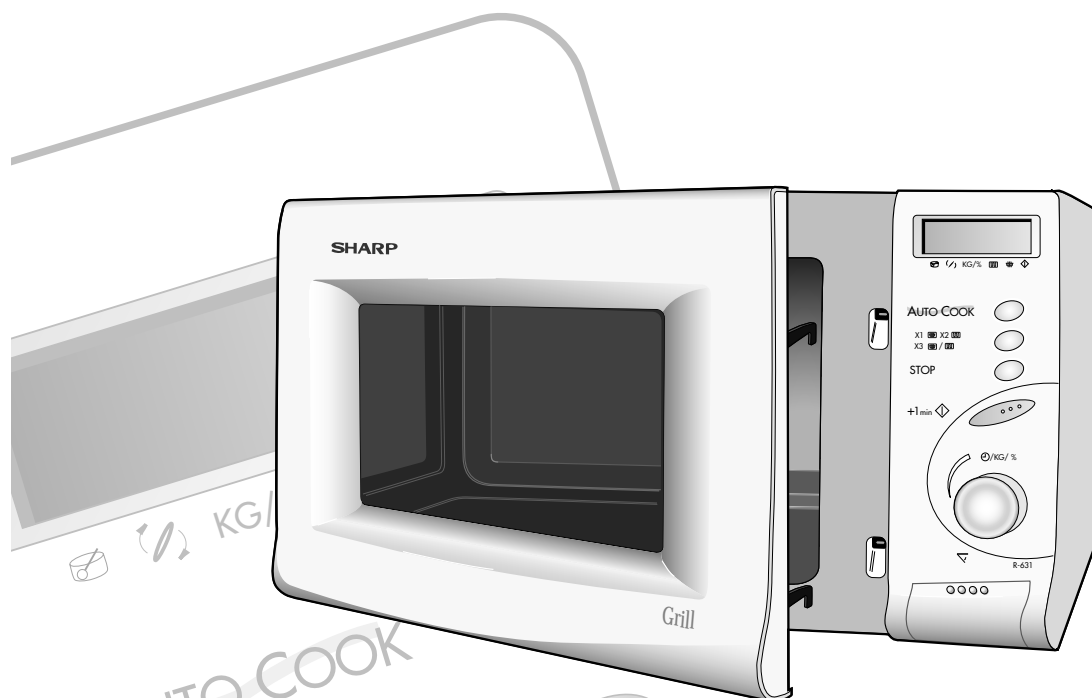

AUTO COOK

X1 X2 X3

STOP

R-631

MICROWAVE OVEN WITH GRILL OPERATION MANUAL WITH COOKBOOK

OPERATION MANUAL

This operation manual contains important information which you should read carefully before using your microwave oven.

IMPORTANT: There may be a serious risk to health if this operation manual is not followed or if the oven is modified so that it operates with the door open.

800W (IEC 705)

ENGLISH

Dear Customer,

Congratulations on acquiring your new microwave oven, which from now on will make your kitchen chores considerably easier.

You will be pleasantly surprised by the kinds of things you can do with a microwave. Not only can you use it for rapid defrosting or heating up of food, you can also prepare whole meals.

In our test kitchen our microwave team has gathered together a selection of the most delicious international recipes which are quick and simple to prepare.

Be inspired by the recipes we have included and prepare your own favourite dishes in your microwave oven.

There are so many advantages to having a microwave oven which we are sure you will find exciting:

- Food can be prepared directly in the serving dishes, leaving less to wash up.
- Shorter cooking times and the use of little water and fat ensure that many vitamins, minerals and characteristic flavours are preserved.

We advise you to read the cookery book guide and operating instructions carefully.

You will then easily understand how to use your oven.

Enjoy using your microwave oven and trying out the delicious recipes.

CONTENTS



OVEN AND ACCESSORIES	2
CONTROL PANEL	3
IMPORTANT SAFETY INSTRUCTIONS	4-6
INSTALLATION	6
BEFORE OPERATION	7
SETTING THE CLOCK	7
MICROWAVE POWER LEVEL	8
MICROWAVE COOKING	8-9
GRILL COOKING/DUAL GRILL COOKING	10
OTHER CONVENIENT FUNCTIONS	11-12
AUTO COOK OPERATION	13
AUTO COOK CHARTS	14-17
CARE AND CLEANING	18
SERVICE CALL CHECK	18
SPECIFICATIONS	19
SERVICE ADDRESSES	19-24




ENGLISH




OVEN AND ACCESSORIES



OVEN

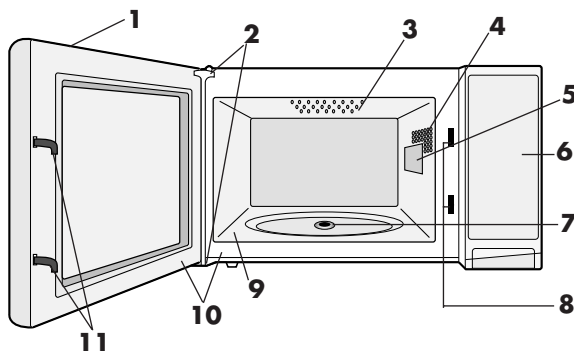

- 1** Door
- 2** Door hinges
- 3** Grill heating element
- 4** Oven lamp
- 5** Waveguide cover
- 6** Control panel
- 7** Seal packing
- 8** Door lock openings
- 9** Oven cavity
- 10** Door seals and sealing surfaces
- 11** Door safety latches

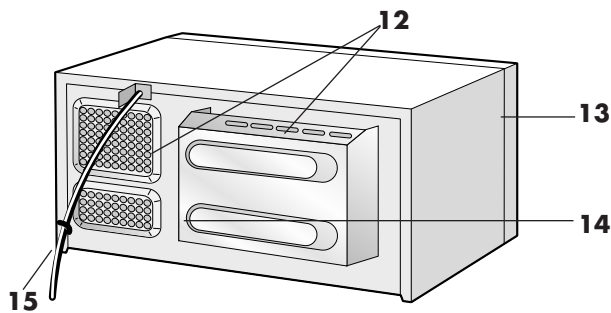

- 12** Ventilation openings
- 13** Outer cabinet
- 14** Rear cabinet
- 15** Power supply cord

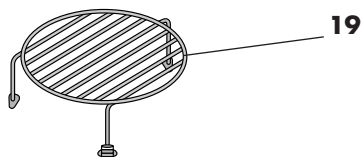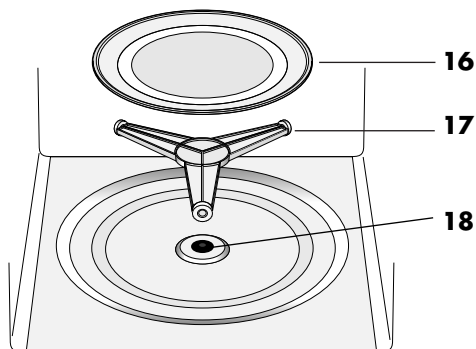

ACCESSORIES:

Check to make sure the following accessories are provided:

(16) Turntable **(17)** Roller stay **(18)** Seal packing
(19) Rack


Place the roller stay in the seal packing on the floor of the cavity.

Then place the turntable on the roller stay.

To avoid turntable damage, ensure dishes or containers are lifted clear of the turntable rim when removing them from the oven.

NOTE: When you order accessories, please mention two items: part name and model name to your dealer or SHARP authorised service agent.

CONTROL PANEL

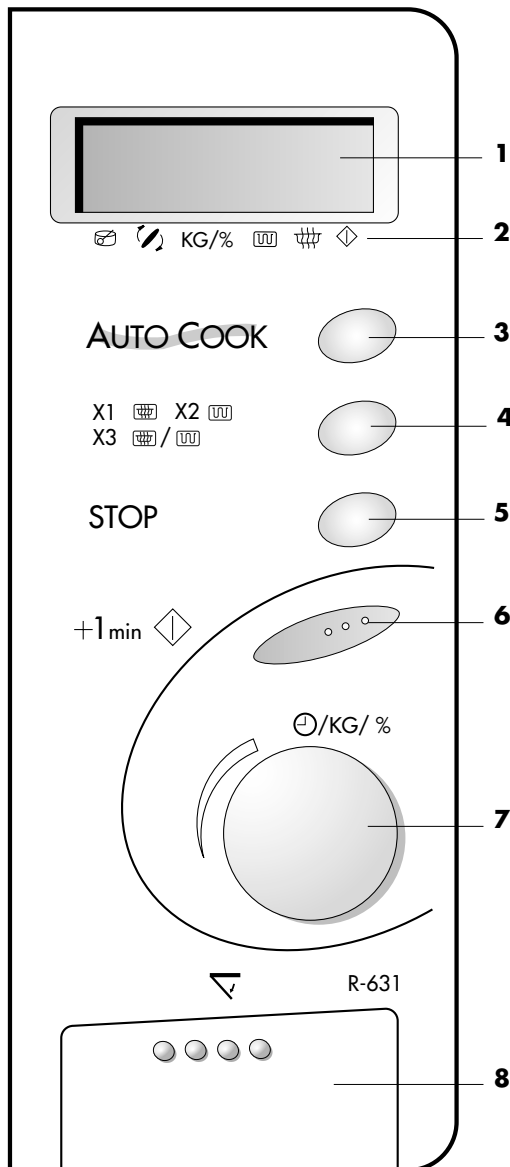

CONTROL PANEL

1 Digital Display

2 Indicators

The appropriate indicator will flash or light up, just above each symbol according to the instruction. When an indicator is flashing, press the suitable button (having the same symbol) or do the necessary operation.



Stir



Turn over



Weight/power level



Grill



Microwave indicator



Cooking in progress indicator

3 **AUTO COOK** button

Press to select one of the ten automatic programmes.

4 **COOKING MODE** button

Press to select either microwave power level, grill or dual grill.

x 1 press once to select microwave function

x 2 press twice to select the grill

x 3 press three times to select dual mode, microwave with grill

5 **STOP** button

6 **MINUTE PLUS/START** button

7 **TIMER/WEIGHT/POWER** knob

8 **DOOR OPEN** button



IMPORTANT SAFETY INSTRUCTIONS

IMPORTANT SAFETY INSTRUCTION: READ CAREFULLY AND KEEP FOR FUTURE REFERENCE

To avoid the danger of fire.

The microwave oven should not be left unattended during operation. Power levels that are too high, or cooking times that are too long, may overheat foods resulting in a fire.

This oven is not designed to be built into a kitchen unit. The electrical outlet must be readily accessible so that the unit can be unplugged easily in an emergency. The AC power supply must be 230V, 50Hz, with a minimum 16A distribution line fuse, or a minimum 16A distribution circuit breaker.

It is recommended that a separate circuit serving only this appliance be provided.

Do not place the oven in areas where heat is generated. For example, close to a conventional oven. Do not install the oven in an area of high humidity or where moisture may collect.

Do not store or use the oven outdoors.

If food being heated begins to smoke, DO NOT OPEN THE DOOR. Turn off and unplug the oven and wait until the food has stopped smoking. Opening the door while food is smoking may cause a fire.

Use only microwave-safe containers and utensils. See Page XX

Do not leave the oven unattended when using disposable plastic, paper or other combustible food containers.

Clean the waveguide cover, the oven cavity, the turntable and roller stay after use. These must be dry and free from grease. Built-up grease may overheat and begin to smoke or catch fire.

Do not place flammable materials near the oven or ventilation openings. Do not block the ventilation openings.

Remove all metallic seals, wire twists, etc., from food and food packages. Arcing on metallic surfaces may cause a fire.

Do not use the microwave oven to heat oil for deep frying. The temperature cannot be controlled and the oil may catch fire.

To make popcorn, use only special microwave popcorn makers.

Do not store food or any other items inside the oven. Check the settings after you start the oven to ensure the oven is operating as desired.

See the corresponding hints in the cookery book section.

To avoid the possibility of injury.

WARNING:

Do not operate the oven if it is damaged or malfunctioning. Check the following before use:

- a) The door; make sure the door closes properly and ensure it is not misaligned or warped.
- b) The hinges and safety door latches; check to make sure they are not broken or loose.
- c) The door seals and sealing surfaces; ensure that they have not been damaged.
- d) Inside the oven cavity or on the door; make sure there are no dents.
- e) The power supply cord and plug; ensure that they are not damaged.

Never adjust, repair or modify the oven yourself. It is hazardous for anyone other than a competent person to carry out any service or repair operation which involves the removal of a cover which gives protection against exposure to microwave energy.

Do not operate the oven with the door open or alter the door safety latches in any way.

Do not operate the oven if there is an object between the door seals and sealing surfaces.

Do not allow grease or dirt to build up on the door seals and adjacent parts. Follow instructions for "Care and Cleaning", Page 18.

Individuals with PACEMAKERS should check with their doctor or the manufacturer of the pacemaker for precautions regarding microwave ovens.

To avoid the possibility of electric shock

Under no circumstances should you remove the outer cabinet.

Never spill or insert any objects into the door lock openings or ventilation openings. In the event of a spill, turn off and unplug the oven immediately, and call an authorised SHARP service agent.

Do not immerse the power supply cord or plug in water or any other liquid.

Do not let the power supply cord hang over the edge of a table or work surface.

Keep the power supply cord away from heated surfaces, including the rear of the oven.

Do not attempt to replace the oven lamp yourself or

IMPORTANT SAFETY INSTRUCTIONS



allow anyone who is not an electrician authorised by SHARP to do so. If the oven lamp fails, please consult your dealer or an authorised SHARP service agent. If the power supply cord of this appliance is damaged, it must be replaced with a special cord. The exchange must be made by an authorised SHARP service agent.

To avoid the possibility of explosion and sudden boiling:

WARNING:

Liquids and other foods must not be heated in sealed containers since they are liable to explode.

Remove seals and lids before use. Sealed containers can explode due to a build up of pressure even after the oven has been turned off. Take care when microwaving liquids. Use a wide-mouthed container to allow bubbles to escape.

Never heat liquids in narrow necked containers such as baby bottles, as this may result in the contents erupting from the container when heated and cause burns.

To prevent sudden eruption of boiling liquid and possible scalding:

1. Stir liquid prior to heating/reheating.
2. It is advisable to insert a glass rod or similar utensil into the liquid whilst reheating.
3. Let liquid stand in the oven at the end of cooking time to prevent delayed eruptive boiling.

Do not cook eggs in their shells, and whole hard boiled eggs should not be heated in microwave ovens since they may explode even after microwave cooking has ended. To cook or reheat eggs which have not been scrambled or mixed, pierce the yolks and the whites, or the eggs may explode. Shell and slice hard boiled eggs before reheating them in the microwave oven.

Pierce the skin of such foods as potatoes, sausages and fruit before cooking, or they may explode.

To avoid the possibility of burns

Use pot holders or oven gloves when removing food from the oven to prevent burns.

Always open containers, popcorn makers, oven cooking bags, etc., away from the face and hands to avoid steam burns.

To avoid burns, always test food temperature and stir before serving and pay special attention to the temperature of food and drink given to babies, children or the elderly.

Temperature of the container is not a true indication of the temperature of the food or drink; always check the food temperature.

Always stand back from the oven door when opening it to avoid burns from escaping steam and heat.

Slice stuffed baked foods after heating to release steam and avoid burns.

Keep children away from the door to prevent them burning themselves.

Do not touch the oven door, outer cabinet, rear cabinet, oven cavity, ventilation openings, accessories and dishes during **GRILL** mode, **DUAL GRILL** mode and **AUTO COOK** operation as they will become hot. Before cleaning make sure they are not hot.

To avoid misuse by children

WARNING: Only allow children to use the oven without supervision when adequate instructions have been given so that the child is able to use the oven in a safe way and understands the hazards of improper use.

Do not lean or swing on the oven door. Do not play with the oven or use it as a toy.

Children should be taught all important safety instructions: use of potholders, careful removal of food coverings; paying special attention to packaging (e.g. self-heating materials) designed to make food crisp, as they may be extra hot.

Other Warnings

Never modify the oven in any way.

Do not move the oven while it is in operation.

This oven is for home food preparation only and may only be used for cooking food. It is not suitable for commercial or laboratory use.

To promote trouble-free use of your oven and avoid damage

Never operate the oven when it is empty, except where recommended in the operation manual, see page 10 "Note 2". Doing so may damage the oven.

When using a browning dish or self-heating material, always place a heat-resistant insulator such as a porcelain plate under it to prevent



IMPORTANT SAFETY INSTRUCTIONS

damage to the turntable and roller stay due to heat stress. The preheating time specified in the dishes instructions must not be exceeded.

Do not use metal utensils, which reflect microwaves and may cause electrical arcing. Do not put cans in the oven.

Use only the turntable and the roller stay designed for this oven.

To prevent the turntable from breaking:

(a) Before cleaning the turntable with water, leave the turntable to cool.

(b) Do not put hot foods or hot utensils on a cold turntable.

(c) Do not put cold foods or cold utensils on a hot turntable.

Do not place anything on the outer cabinet during operation.

Do not use plastic containers for microwaving if the

oven is still hot from using the **GRILL** mode, **DUAL GRILL** mode and **AUTO COOK OPERATION**, because they may melt. Plastic containers must not be used during above modes unless the container manufacturer says they are suitable.

NOTE:

If you are unsure how to connect your oven, please consult an authorised, qualified electrician.

Neither the manufacturer nor the dealer can accept any liability for damage to the oven or personal injury resulting from failure to observe the correct electrical connection procedure.


Water vapour or drops may occasionally form on the oven walls or around the door seals and sealing surfaces. This is a normal occurrence and is not an indication of microwave leakage or a malfunction.



INSTALLATION


1. Remove all packing materials from the inside of the oven cavity. Discard the loose polythene sheet from between the door and cavity. Remove the feature sticker, if attached, from the **outside** of the door.

Do not remove the protective film attached to the **inside** of the door.

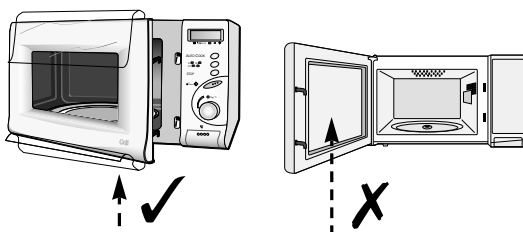

2. Check the oven carefully for any signs of damage.
3. Place the oven on a flat, level surface strong enough to support the oven's weight plus the heaviest item likely to be cooked.

4. The oven door becomes hot during cooking, place or mount the oven so that the bottom of the oven is 85cm or more above the floor.
5. Ensure there is a minimum free space above the oven of 21 cm.

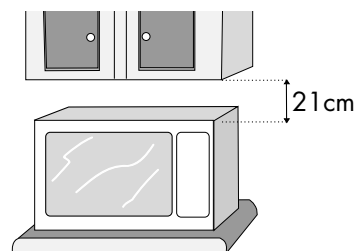

6. Securely connect the plug of the oven to a standard earthed (grounded) household electrical outlet.

BEFORE OPERATION



Plug in the oven.

1. The oven display will flash:
2. Press the **STOP** button, the display will show:
3. To set the clock, see below.
4. Heat the oven without food. (See page 10, Note 2).

Using the STOP button

Use the **STOP** button to:

1. Erase a mistake during programming.
2. Stop the oven temporarily during cooking.
3. Cancel a programme during cooking, touch twice.

1.

2. STOP x1

SETTING THE CLOCK



NOTE: Plug the oven in. The display will flash . Press the **STOP** button and the display will show . Set the clock according to the following instructions. If the power to the oven is interrupted, when it is plugged in again the display will flash . If this occurs when the oven is operating, the programme will be lost. The time of day will also be lost. The clock must be reset to the correct time of day.

Example:


To set the 24 hour clock to 23:35.

(To set the 12-hour clock, press and hold the **COOKING MODE** button for 3 seconds. The display shows)

To set the 24-hour clock, press the **COOKING MODE** button again after step 3 below. The display will show




The display flashes.

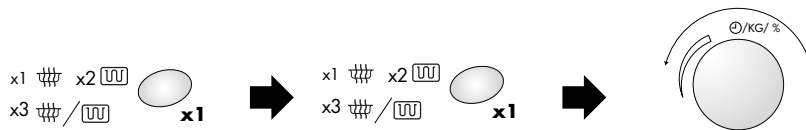

1 x hold for 3 seconds.

Press to enter the 24-hour clock.

Enter the hours.

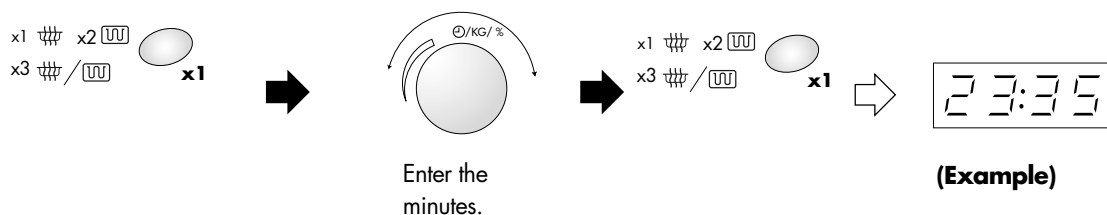

(Example)



MICROWAVE POWER LEVEL

Your oven has 5 power levels. To choose the power level for cooking, follow the advice given in the recipe section. Generally the following recommendations apply:

100P (800W) used for fast cooking or reheating e.g. for plated meals, hot beverages, vegetables, fish, etc.

70P (560W) For longer cooking of dense foods such as roast joints. For sensitive dishes, eg. cheese sauce, reduce the power setting. At a reduced setting, the dishes will not boil over and meat will cook evenly without over cooking at the sides.

50P (400W) For dense foods which require a long cooking time when prepared conventionally, eg. beef dishes, it is advisable to reduce the power setting and increase the cooking time. In this way, the meat will be more tender.

30P (240W) DEFROST SETTING. To defrost, select a low power setting. This ensures that the dish defrosts evenly. This setting is also ideal for simmering rice, pasta and dumplings.

10P (80W) For gentle defrosting, eg. cream gateaux, you should select the lowest power setting.

P = Percentage

To set the microwave power level :

Rotate the **TIMER/WEIGHT/POWER** knob clockwise to select cooking time.

Press the **COOKING MODE** button once (microwave only).

To change the microwave power level rotate the knob until the desired power level is reached.

Press the **MINUTE PLUS/START** button.

NOTE: If the power level is not selected, 100P is automatically set.



MICROWAVE COOKING

Your oven can be programmed for up to 90 minutes. (90.00) The input unit of cooking (defrosting) time varies from 10 seconds to five minutes. It depends on the total length of the cooking (defrosting) time as shown on the table.

Cooking time	Increasing unit
0-5 minutes	10 seconds
5-10 minutes	30 seconds
10-30 minutes	1 minute
30-90 minutes	5 minutes

MICROWAVE COOKING



Example:


Suppose you want to heat soup for 2 minutes and 30 seconds on 70P microwave power.

Enter desired cooking time by rotating **TIMER/WEIGHT/POWER** knob clockwise.

Choose desired cooking mode by pressing **COOKING MODE** button once (microwave only).

Choose desired power by rotating the **TIMER/WEIGHT/POWER** knob clockwise

Press **MINUTE PLUS/START** button once to begin cooking.

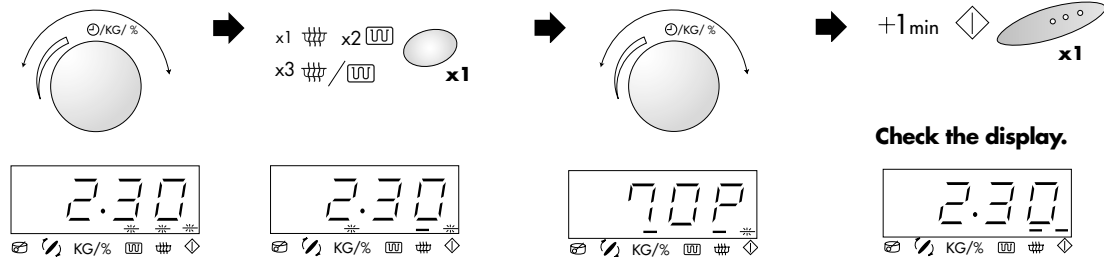

NOTE:

1. When the door is opened during the cooking process, the cooking time on the digital display stops automatically. The cooking time starts to count down again when the door is closed and the **MINUTE PLUS/START** button is pressed.
2. If you wish to know the power level during cooking, press the **COOKING MODE** button. As long as your finger is touching the **COOKING MODE** button, the power level will be displayed.
3. You can rotate the **TIMER/WEIGHT/POWER** knob clockwise or counter-clockwise. If you rotate the knob counter-clockwise, the cooking time will decrease from 90 minutes by degrees.



GRILL COOKING/DUAL GRILL COOKING


This microwave oven has two **GRILL** cooking modes: 1. Grill only. 2. Grill with microwave.

1. GRILL ONLY COOKING


This mode can be used to Grill/Brown food.

Example : To make toast for 4 minutes.


Enter desired cooking time by rotating the **TIMER/WEIGHT/POWER** knob clockwise

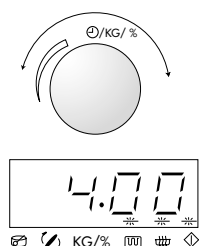

Choose the desired cooking mode by pressing the **COOKING MODE** button twice. (Grill only).

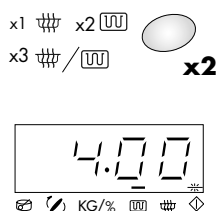

Press the **MINUTE PLUS/START** button once to begin cooking.

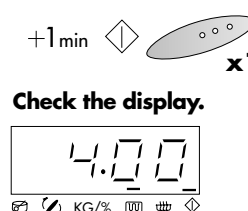

NOTE:

1. The rack is recommended for grilling of flat pieces of food.
2. You may detect smoke or a burning smell when using the grill for the first time, this is normal and not a sign that the oven is out of order.
To avoid this problem, when first using the oven, operate the grill without food for 20 minutes.

2. DUAL GRILL COOKING


This mode uses a combination of Grill power and Microwave power (**10P to 50P**).

The Microwave power level is preset to **30P**.


Example:

To cook kebabs (as per recipe page XX in the Cookbook) for 7 minutes on **DUAL GRILL MEDIUM (50P)**.


Enter the desired cooking time by rotating the **TIMER/WEIGHT/POWER** knob clockwise

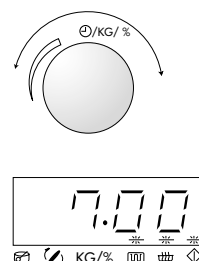


Choose the desired cooking mode by pressing the **COOKING MODE** button three times to select Microwave with Grill.

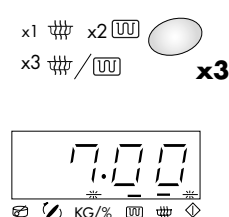

Rotate the **TIMER/WEIGHT/POWER** knob to the desired microwave power level

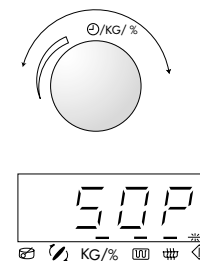

Press the **MINUTE PLUS/START** button once to begin cooking

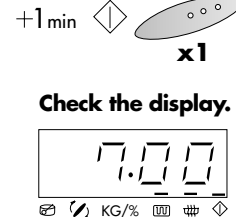

OTHER CONVENIENT FUNCTIONS



1. MULTIPLE SEQUENCE COOKING

A sequence of 3 stages (maximum) can be programmed using combinations of **MICROWAVE**, **GRILL** or **DUAL GRILL**

Example:-

To cook : 2 minutes and 30 seconds on 70P power (Stage 1)
5 minutes Grill only (Stage 2)






STAGE 1

Enter the desired cooking time by rotating **TIMER/WEIGHT/POWER** knob clockwise.

Choose the desired cooking mode by pressing **COOKING MODE** button once (microwave only).

Enter the desired power level by rotating **TIMER/WEIGHT/POWER** knob clockwise

   Press the **COOKING MODE** button before programming Stage 2.

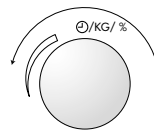

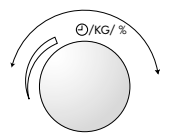


STAGE 2

Enter desired time by rotating **TIMER/WEIGHT/POWER** knob clockwise

Choose the desired cooking mode by pressing the **COOKING MODE** button twice (Grill only)

  Press **MINUTE PLUS/START** button once to begin cooking

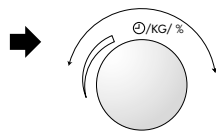

(The oven will begin to cook for 2 minutes and 30 seconds at 70P, and then for 5 minutes on Grill only).

Example:

To cook Zucchini Noodle Gratin (page XX, Cookbook).

1. 21 minutes at 100P.
2. 6 minutes Dual Grill at 50P.



OTHER CONVENIENT FUNCTIONS

2. MINUTE PLUS FUNCTION

The **MINUTE PLUS/START** button allows you to operate the two following functions:

a. Direct start

You can directly start cooking on 100P microwave power level for 1 minute by pressing the **MINUTE PLUS/START** key.



NOTE:

 
To avoid the misuse by children the **MINUTE PLUS/START** button can be used only within 1 minute after preceding operation, i.e., closing the door or pressing the **STOP** button.

b. Extend the cooking time.

You can extend the cooking time for multiples of 1 minute if the button is pressed while the oven is in operation.

3. TO CHECK THE POWER LEVEL

To check the microwave power level during cooking press the **COOKING MODE** button.



As long as your finger is touching the **COOKING MODE** button the power level will be displayed.

The oven continues to count down although the display shows the power level.

AUTO COOK OPERATION



AUTO COOK automatically works out the correct cooking mode and cooking time. You can choose from 10 **AUTO COOK** menus. What you need to know when using this automatic function:

1. Press the **AUTO COOK** button once, the display will appear as shown.
The menu can be chosen by pressing the **AUTO COOK** button until the desired menu number is displayed. See pages 14-16 "**AUTO COOK** chart".
2. The weight or quantity of the food can be input by rotating the **TIMER/WEIGHT/POWER** knob until the desired weight/quantity is displayed.
 - Enter the weight of the food only. Do not include the weight of the container.
 - For food weighing more or less than weights/quantities given in the **AUTO COOK** chart, use manual programmes. For best results, follow the cooking charts in the cookbook.
3. To start cooking press **MINUTE PLUS/START** button.

When action is required (e.g. to turn food over) the oven stops and the audible signals sound, remaining cooking time and any indicator will flash on the display. To continue cooking, press the **MINUTE PLUS/START** button.

The final temperature will vary according to the initial temperature. Check food is piping hot after cooking. If necessary, you can extend the cooking time and change the power level.

Example:

To cook Gratin 1.5kg (AC : 9)

 
Select the menu required by pressing the **AUTO COOK** button nine times.




Enter the weight by rotating the **TIMER/WEIGHT/POWER** knob clockwise.



Press the **MINUTE PLUS/START** button once.



Check the display.

 


AUTO COOK button




check the display:



TIMER/WEIGHT/POWER knob

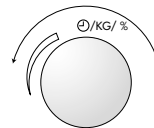

MINUTE PLUS/START button

 



AUTO COOK CHARTS

AUTO COOK AC-1

French Fries

Quantity: 0.2 - 0.3kg
 Utensils: Flan dish
 Rack
 Increasing unit: 50g
 Initial food temp: -18°C, (frozen)
 Recommended
 Menus: Frozen french fries
 (recommended for conventional oven preparation)

Procedure:

- Remove the frozen french fried potatoes from the package and place them on a china dish.
- Place the dish on the rack in the oven.
- When the audible signals sound, turn over.
- After cooking, remove from the dish and put on a plate for serving. (No standing time is necessary).
- Add salt to taste.

NOTE:

The dish gets very hot during cooking. To avoid burning yourself, please use oven gloves for removing the pan from the oven.

AUTO COOK AC-2

Boiled Potatoes, Jacket Potatoes

Quantity: 0.1 - 0.8kg
 Utensils: Bowl & lid
 Increasing unit: 100g
 Initial food temp: 20°C (room temperature)

Procedure:

Boiled Potatoes: Peel the potatoes and cut them into similar sized pieces.

Jacked Potatoes: Choose potatoes of similar size and wash them.

- Put the boiled or jacket potatoes into a bowl.
- Add the required amount of water (per 100g) approx 2 tbsp and a little salt.
- Cover with a lid
- When the oven stops and the audible signals sound, stir and re-cover.
- After cooking, let the potatoes stand for 1-2 minutes.

AUTO COOK AC-3

Frozen vegetables

Quantity: 0.1 - 0.6kg
 Utensils: Bowl & Lid
 Increasing unit: 100g
 Initial food temp: -18°C, (frozen)
 Recommended
 Menus: Brussels sprouts, green beans, peas, mixed vegetables, broccoli.

Procedure:

- Add 1 tbsp water per 100g. (For mushrooms no additional water is necessary).
- Cover with a lid.
- When the oven stops and the audible signals sound, stir and re-cover.
- After cooking, let stand for approx. 1-2 minutes.

NOTE:

If frozen vegetables are compacted together, cook manually

AUTO COOK AC-4

Fish fillets with sauce

Quantity: 0.4 - 1.2kg*
 (fish: 0.2 - 0.6kg)
 (sauce: 0.2 - 0.6kg)
 Utensils: Flan dish & microwave plastic wrap
 Increasing unit: 100g
 Initial food temp: Fish 5°C, Sauce 20°C
 Recommended
 Menus: Fish: Cod fish, Rose fish, Coal fish
 Sauce: Provencal sauce, Piquant sauce, Leek and cheese sauce, Curry sauce.

Procedure:

- Put the fish fillet in a flan dish with the thin ends towards the centre.
- Spread the prepared sauce on the fish fillet.
- Cover with microwave plastic wrap and cook.
- After cooking let the food stand for approx. 2 minutes.

* Total weight of fish and sauce

See recipes for sauces on Page 17.



AUTO COOK AC-5

Grilled Chicken

Quantity: 0.9 - 1.4kg
 Utensils: Flan dish
 Increasing unit: 100g
 Initial food temp: 5°C, chilled
 Recommended
 Menus: Chicken
 Ingredients for 1.2kg grilled chicken:
 Salt and pepper, 1 tsp sweet paprika, 2 tbsp oil

Procedure:

- Mix the ingredients and spread on the chicken.
- Pierce the skin of the chicken.
- Put chicken on a flan dish breast side down.
- Place directly on the turntable and cook.
- When audible signals sound, turn the chicken over.
- After cooking, remove and put on a plate for serving. (No standing time necessary).

AUTO COOK AC-6

Chicken legs

Quantity: 0.2 - 0.6kg
 Utensils: Rack
 Increasing unit: 100g
 Initial food temp: 5°C, chilled
 Recommended
 Menus: Chicken legs
 Ingredients for 0.6kg chicken legs:
 (3 pieces), 1-2 tbsp oil, $\frac{1}{2}$ tsp salt, 1 tsp sweet paprika, 1 tsp rosemary.

Procedure

- Mix the ingredients and spread on the chicken legs.
- Pierce the skin of the chicken legs.
- Put the chicken legs on the rack, skin side down, with the thin ends towards the centre.
- When audible signals sound, turn the food over.
- After cooking, remove and put on a plate for serving. (No standing time is necessary).

AUTO COOK AC-7

Roast Pork

Quantity: 0.6 - 1.5kg
 Utensils: Flan dish
 Increasing unit: 100g
 Initial food temp: 5°C, chilled
 Recommended
 Menus: Menus : rolled lean pork
 Ingredients for 1kg rolled lean pork
 1 garlic clove, crushed, 2 tbsp oil, 1 tbsp sweet paprika, a little cumin powder, 1 tsp salt.

Procedure:

- Lean roast pork is recommended.
- Mix all ingredients and spread them onto the pork.
- Place the pork in a flan dish directly on the turntable and cook.
- When audible signal sounds, turn the food over.
- After cooking, let the food stand wrapped in aluminium foil for approx. 10 minutes.

AUTO COOK AC-8

Kebabs

Quantity: 0.2 - 0.6kg
 Utensils: Rack
 Increasing unit: 100g
 Initial food temp: 5°C, chilled
 Recommended Kebabs
 Menus: See recipes page XX.

Procedure:

- Prepare the grill skewers.
- Place on a rack and cook.
- When the audible signal sounds turn over.
- After cooking, remove and put on a plate for serving. (No standing time necessary).



AUTO COOK CHARTS

AUTO COOK AC- 9

Gratin

Quantity: 0.5 - 1.5kg
Utensils: Shallow, oval gratin dish
Increasing unit: 100g
Initial food temp: 20°C, (room temperature)
Recommended
Menus: Courgette and pasta gratin.

Procedure:

- Prepare the gratin referring to the attached cookbook section, page XX.
- After cooking, let the food stand covered for approx. 5-10 minutes.

AUTO COOK AC-0

Easy Defrost

This menu can be used to defrost Chicken legs, Steak, Chops, Fish fillet, Poultry.

Chicken legs, Steak, Chops, Fish fillet

Quantity: 0.2 - 0.8kg
Utensils: (See note below)
Increasing unit: 100g
Initial food temp: -18°C, (frozen)

Procedure:

- Place the food on a plate in the centre of the turntable.
- When the oven stops and the audible signals sound, turn the food over, rearrange and separate.
- When the oven stops and the audible signals sound, turn the food over, rearrange and separate again.
- After defrosting, wrap in aluminium foil for 10-30 minutes, until thoroughly defrosted.

Poultry

Quantity: 0.9 - 1.5kg
Utensils: (See note below)
Increasing unit: 100g
Initial food temp: -18°C, (frozen)

Procedure:


- Place a plate upside down on the turntable and put the poultry breast side down on the plate.
- When the oven stops and the audible signal sounds, turnover and repeat every time the oven stops and the audible signal sounds.
- After defrosting, cover with aluminium foil and stand for 30-90 minutes until thoroughly defrosted.

NOTE: Easy Defrost (AC-0)

- 1 Steaks, Chops, Chicken legs and Fish fillets should be frozen in one layer.
- 2 After turning over, shield the defrosted portions with small, flat pieces of aluminium foil.
- 3 The poultry should be processed immediately after defrosting.
- 4 Arrange the food in the oven as shown:

Chicken legs, Steaks, Chops and Fish fillets

Poultry

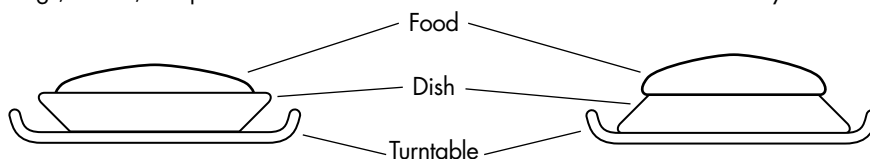



Fish fillet with sauce - Cod fish fillet Provençal

Ingredients

15-20g	butter
75g	mushrooms cut in slices
1 clove	garlic (crushed)
40-50g	spring onion
600g	tinned tomatoes without juice, drain well
1 tsp	lemon juice
1 1/2 tbsp	tomato ketchup
1/2-1 tsp	dried basil, salt and pepper
600g	cod fish fillet

Preparation

1. Cook butter, mushrooms, onions and garlic together in a flan dish for 3-4 mins. on 100P.
2. Mix tomatoes, lemon juice, ketchup, basil, salt and pepper.
3. Place fish fillet on the vegetables and cover with sauce and some vegetables.
4. Cook on AUTO COOK AC-4 "Fish fillets with sauce".

Fish fillet with Leek and Cheese-sauce

Ingredients

40g	butter
125g	spring onion
1/2 tsp	dried Marjoram
30g	flour
375ml	milk
75g	grated Gruyere, salt, pepper
1 tbsp	chopped parsley
600g	fish fillet (e.g. coal fish)

Preparation

1. Put butter, onions and Marjoram in a casserole and heat for 3-4 mins on 100P.
2. Stir in the flour and add the milk. Stir to a smooth sauce.
3. Cook for 3-4 mins on 100P uncovered.
4. Stir in the cheese, season to taste.
5. Place the fish fillet in a quiche dish and pour the sauce over it.
6. Cook on AUTO COOK AC-4 "Fish fillets with sauce".
7. After cooking take out the fish and stir the sauce well.

Fish fillet with Piquant sauce

Ingredients

450g	canned tomatoes, drain
150g	corn
2tsp	chilli sauce
30g	onion, finely chopped
2tsp	red wine vinegar
1/4 tsp	mustard
1 spice	thyme
1 spice	cayenne pepper
600g	fish fillet (e.g. rosefish)

Preparation

1. Mix ingredients for the sauce.
2. Place fish fillet (e.g. Rosefish fillet) in a quiche dish and spread the sauce on fish fillet.
3. Cook on AUTO COOK AC-4 "Fish fillets with sauce".

Fish fillet with Curry sauce

Ingredients

30g	butter
20g	chopped almonds
1-1 1/2 tbsp	curry
25g	flour (wholemeal)
30g	raisins
150g	pineapples (small pieces)
100ml	broth
100ml	pineapple juice
100g	sour cream
75g	peas (frozen), salt, pepper
600g	fish fillet (coal fish)

Preparation

1. Heat butter, almonds and curry covered for 1-2 mins on 100P.
2. Add the flour and stir very well.
3. Add raisins, pineapple, pineapple juice, broth and cream, stirring continuously.
4. Cook covered for 2-3 mins. on 100P and stir after cooking.
5. Add the peas and stir.
6. Season with salt and pepper.
7. Place the fish in a quiche dish and pour over the sauce.
8. Cook covered on AUTO COOK AC-4 "Fish fillets with sauce".

NOTES:

1. These indications are for 1.2kg. If you want to cook less than 1.2kg you have to adjust (reduce) the ingredients for the sauce and also the cooking time for the preparation of the sauce, and adjust the quantity of fish.
2. If you want to make the sauce thicker for cod fillet provençal or fish fillet with piquant sauce, remove the fish after cooking and stir in some sauce thickening powder (please follow manufacturer's instructions).



CARE AND CLEANING

Caution

Do not use commercial oven cleaners, abrasive harsh cleaners or scouring pads on any part of your microwave oven.

Oven exterior

The outside of your oven can be easily cleaned with mild soap and water. Make sure that the soap is wiped off with a moist cloth, and dry the exterior with a soft towel.

Control panel

Open the door before cleaning to de-activate the control panel. Care should be taken in cleaning the control panel. Using a cloth dampened with water only, gently wipe the panel until it becomes clean. Avoid using excessive amounts of water. Do not use any sort of chemical or abrasive cleaner.

Oven Interior

1. For cleaning, wipe any spatters or spills with a soft damp cloth or sponge after each use while the oven is still warm. For heavier spills, use mild soap

and wipe several times with a damp cloth until all residues are removed.

2. Make sure that mild soap or water do not penetrate the small vents in the walls which may cause damage to the oven.
3. Do not spray type cleaners on the oven interior.
4. Heat up your oven regularly by using the grill, refer to note 2 on page 10. Remaining food or fat splashed can cause smoke or a bad smell.

Turntable and Roller stay

Remove the turntable and roller stay from the oven. Wash the turntable and roller stay in mild soapy water. Dry with a soft cloth. Both the turntable and the roller stay are dishwasher safe.

Door

To remove all trace of dirt, regularly clean both sides of the door, the door seals and surfaces with a soft, damp cloth.

Rack

This should be washed in a mild washing up liquid solution and dried. Rack is dishwasher safe.



SERVICE CALL CHECK

Please check the following before calling for service.

1. Power Supply

Check the power plug is properly connected to a suitable wall outlet.

Check the line fuse/circuit breaker is functioning properly.

2. When the door is opened, does the oven lamp light?

YES _____ NO _____

3. Place a cup of water (approx. 150 ml) in the oven and close the door securely.

Programme the oven for one minute on 100P power and start the oven.

Does the oven lamp come on?

YES _____ NO _____

Does the turntable rotate?

YES _____ NO _____

NOTE: The turntable turns in either direction.

Does the ventilation work?

YES _____ NO _____

(Place your hand over the ventilation openings and check for air flow.)

After 1 minute does the signal sound?

YES _____ NO _____

Does cooking in progress indicator go off?

YES _____ NO _____

Is the cup with water warm after the above operation?

YES _____ NO _____

4. Programme the grill for three minutes and start the oven.

After 3 minutes does the grill heating element become red?

YES _____ NO _____

If "NO" is the answer to any of the above questions, call your dealer or an authorised SHARP Service Agent and report the results of your check.

SPECIFICATIONS



AC Line Voltage	: 230V, 50Hz, single phase
Distribution line fuse/circuit breaker	: Minimum 16A
AC Power required:	Microwave : 1350W
	Grill : 1050W
Output power:	Microwave : 800W (IEC 705)
	Grill heating elements : 1000W (500W x 2)
Microwave Frequency	: 2450MHz
Outside Dimensions	: 449mm(W) x 282mm(H) x 374mm(D)
Cavity Dimensions	: 290mm(W) x 194mm(H) x 313mm(D)
Oven Capacity	: 18 litres
Turntable	: ø272mm
Weight	: approx. 14 kg
Oven lamp	: 25W/240-250V

SPECIFICATIONS ARE SUBJECT TO CHANGE WITHOUT NOTICE

This oven complies with the requirements of Directives 89/336/EEC and 73/23/EEC as amended by 93/68/EEC.

SERVICE ADDRESSES



DEUTSCHLAND

Bei einer Reklamation Ihrer SHARP Mikrowelle wenden Sie sich bitte an Ihren Fachhändler oder an eine der nachfolgend aufgeführten SHARP SERVICE Niederlassungen.

01067 Dresden, Gehado Service GmbH, Webergasse 2-4, Tel: 0351-5966-254, Fax: -5966-244 / **03226 Vetschau**, Bernd Mindach, Juri-Gagarin-Str. 7-9, Tel: 035433-2125 / **04159 Leipzig**, Rudolph Franz, Elli-Voigt-Str. 1, Tel: 0341-581469, Fax: -581469
04600 Altenburg, Mechanik Altenburg, Dostoiewskistr. 17a, Tel: 03447-311102, Fax: -311248 / **06217 Merseburg**, Merseburger Haushaltsg.GmbH, Gotthardstr.23, Tel:03461-210290, Fax:-216891 / **06295 Eisleben**, Rudolf Schwarzbach, Hallesche Str. 36, Tel: 03475-3079 / **06618 Naumburg**, Hausgeräte Service, Wenzelstr. 15, Tel: 03445-2016, Fax: -2016 / **06618 Naumburg**, Elektro Schröter, Postring 11-12, Tel: 03445-2960 / **06844 Dessau**, Dessau Elektrik GmbH, Albrechtstr. 116-118, Tel: 0340-213331, Fax: -213332
07407 Rudolfsstadt, Elektro Granowski, Emil-Hartmann-Str. 2, Tel: 03672-32123 / **07545 Gera**, ESS GmbH, Amthorstr. 12, Tel: 0365-6112316, Fax: -6112244 / **07607 Hainespitz**, Elektro Fachmarkt Herrmann&Söhne,Böllschützer Str.1,Tel:036691-53490, Fax: -53493
07973 Greiz, Elektro Riederer Haushaltsgeräte, Reichenbacher Str. 44d, Tel: 03661-3148, Fax: -2488 / **08280 Aue**, Weichhold GmbH, Juri-Gagarin-Ring 12a, Tel: 03771-552222, Fax: -552255 / **08523 Plauen**, Elektrotechnik Plauen, Tel: 03741-26645, Fax: -26868 / **09126 Chemnitz**, Tele-Service GmbH, Bernsdorfer Str. 213, Tel:0371-586960, Fax:0371-55938 / **09221 Neukirchen**, Elektro Walther, Hauptstr. 74, Tel: 0371-37061 / **09246 Pleiße**, ETS Elektrotechnische Großh.,Zeppelinstr.8, Tel:03722-6040,Fax:03722-604200 / **09328 Lunzenau**, Peter Welsch GmbH, Schulstr. 6, Tel: 037383-6434, Fax: -6600 / **09376 Oelsnitz**, Oelsnitz Elektrotechnik GmbH, Bahnhofstr. 43, Tel: 037298-360, Fax: -36102 / **10178 Berlin**, hatec Handels-Service GmbH,Dirksenstr.113-117,Tel:030-2426915,Fax:-2423924 / **12157 Berlin**, Michael Kittler, Cranachstr.2, Tel:030-8554835,Fax: 030-8554835 / **12683 Berlin**, Deubel + Höfermann, Rapsweg 53, Tel: 030-5619112, Fax: -5619112 / **16866 Kyritz**, hatec Handels-Service GmbH, Hamburger Str. 31, Tel: 033971-4137, Fax:-4137 / **17033 Neubrandenburg**, hgs Service GmbH, Südbahnstr. 3, Tel: 0395-6360, Fax: -41135 / **17033 Neubrandenburg**, ATV Service GmbH, Woldegker Str.12,Tel:0395-587504,Fax:-587518 / **18055 Rostock**, Hetec, Mühlendamm 5, Tel:0381-36231, Fax: 0381 - 36231
18057 Rostock, HGS Haushaltsgeräte SVC, Werftstr.18,Tel:0381-4922877, Fax:0381-4922878 / **18246 Bützow**, hgs Haushaltsgeräte Service, Gartenstr. 21, Tel/Fax: 038461-2466 / **18435 Stralsund**, RDS Haushaltsg.Service,Kedingshäger Str.78,Tel:03831-391426,Fax:-390121 / **19057 Schwerin**,hgs Haushaltsg.Service, Am Margaretenhof 14, Tel: 0385-464090,Fax:-465013 / **20357 Hamburg**, Dieter Möller, Schulerblatt 132, Tel: 040-435332, Fax: -4302120 / **20537 Hamburg**, Deubel + Höfermann, Eiffestr. 398, Tel: 040-257227, Fax: -2500192 / **23562 Lübeck**, Lutz H. Boenisch, Helmholtzstr. 12, Tel: 0451-51929 / **24116 Kiel**, Jürgen Skop GmbH, Eckernförder Str. 93, Tel: 0431-13038, Fax: -13811 / **24357 Fleckeby**, Kaack Haushaltsgeräte Service, Südring 14, Tel: 04354-700, Fax: -1311 / **24975 Husby**, Günter Josten, Flensburger Str. 41, Tel: 04634-422, Fax:723 / **25770 Hemmingstedt**, Dirk Stübner, Koesliner Str. 18, Tel: 0481-64943, Fax: -64764 / **26655 Westerstede**, Gerhard Ahrenholtz, Südring 37, Tel: 04488-84770, Fax: -847711 / **26802 Moormerland**, Weert Nordbrock, Königsstr. 187, Tel: 04954-6654, Fax: -6516 / **27404 Heeslingen**, Helmut Willenbrock, Kirchstr. 9-11, Tel: 04281-1031, Fax: -6467 / **27478 Cuxhaven**, Oskar Wieandt & Sohn, Am Kanal 5, Tel: 04724-81300, Fax: -813050 / **28207 Bremen**, Hansa Haushaltsg. Service,Neidenburger Str. 20,Tel:0421-492526,Fax -440932 / **29439 Lüchow**, Elektro-Kittler, Güldenboden 25, Tel: 05841-3322, Zentrale: 030-8551335 / **30165 Hannover**,Strickling Werkkundendienste,Meelbaumstr.8,Tel:0511-3524686,Fax:3505800 / **33607 Bielefeld**, Voss GmbH, Kuckucksweg 47, Tel: 0521-285058, Fax: -285059 / **33818 Leopoldshöhe**,Gehado Service,Schötmarsche Str.1,Tel:05208-

ENGLISH



SERVICE ADDRESSES

6604, Fax: 05208-7777 / **34123 Kassel**, von Rappard GmbH, Heinrich-Hertz-Str. 9, Tel: 0561-580950, Fax: - 5809570 / **34128 Kassel**, Elektro Mohrenhe, Ahnatalstr. 84, Tel: 0561-61727, Fax: 0561-65470 / **35037 Marburg**, Hans-Georg Fuchs, Wilhelmstr. 16, Tel: 06421-22424, Fax: - 27549 / **35415 Pohlheim**, Jung Kundenzentrum, Ludwigstr. 13, Tel: 06403-61131 / **36088 Hünfeld**, Elektro Vogt GmbH, Hauptstr. 22, Tel: 06652-2215, Fax: - 5782 / **37073 Göttingen**, Colorado Service Center, Groner-For-Str. 13, Tel: 0551-45752 Fax: 57969 / **37671 Hörter**, Elektro-Kühlanlagen Nonn, Krämerstr. 8, Tel: 05271-7959, Fax: - 35053

38106 Braunschweig, Reparatur Centrum Adler, Bülteweg 93, Tel: 0531-340901, Fax: 340907 / **38440 Wolfsburg**, G. Gärtner, Grauhorststr. 16, Tel: 05361-31063, Fax: - 31272 / **39106 Magdeburg**, Industrie-Elektronik, Kaiser-Otto-Ring 24, Tel: 0391-551402, Fax: 553520 / **40210 Düsseldorf**, Herbert Dahm KG, Bendemannstr. 9, Tel: 0211-35550, Fax: - 3555120 / **40476 Düsseldorf**, Horst Leven, Rather Str. 21, Tel: 0211-486025, Fax: - 443399 / **41065 Mönchengladbach**, Herbert Hommers, Gutenbergstr. 28, Tel: 02161-603256, Fax: 651951 / **42781 Haan**, Host Kerkühn, Talstr. 8b, Tel: 02129-4466, Fax: - 4037 **44357 Dortmund**, Gehado Service, Freigrafenstr. 23-29, Tel: 0231-937000-0, Fax: 93700044 / **44869 Bochum**, ML Werks-Service GmbH, Ruhrstr. 181, Tel: 02327-77899, Fax: - 74692

45219 Essen, R. Drengenburg, Corneliusstr. 39, Tel: 02054-84114

46045 Oberhausen, Elektro Kropfen, Feldmannstr. 76, Tel: 0208-871711, Fax: - 876652 / **48165 Münster**, Günter Pfeifer, Rohrkampstr. 23, Tel: 02501-3033 / **49324 Melle**, Borgards GmbH, Plettenberger Str. 50, Tel: 05422-949740, Fax: - 949792 / **49492 Westerkappeln**, Elektro Iborg, Goedekingstr. 8, Tel/Fax: 05404-1616 / **50827 Köln**, Hermann F. Esser, Wilhelm-Mauser-Str. 47, Tel: 0221-583006, Fax: 585555 / **51598 Friesenhagen**, Hans Krempel Haustechnik, Mühlenhof 6, Tel: 02734-7377, Fax: - 40618 / **52146 Würselen**, Hubert Hamacher, De Gasperstr. 6+10, Tel: 02405-9600, Fax: - 2704 / **53757 Sankt Augustin**, HDL Elektro-Kundendienst, Kölnstr. 4, Tel: 02241-334408, Fax: - 920334 / **54309 Newel**, Hans Krempel Haustechnik, Römerstr. 22, Tel: 06505-8899

55130 Mainz, Norbert Schwamb, nur telefonische Annahmestelle, Tel: 06131 - 881070 / **55543 Bad Kreuznach**, Hans Krempel Haustechnik, Industriestr. , Tel: 0671-7940, Fax: - 79446 / **56070 Koblenz**, Hans Krempel Haustechnik, August-Horch-Str. 14, Tel: 0261-890938, Fax: 83074 / **57080 Siegen**, Hans Krempel Haustechnik, Gosenbacher Hütte 44, Tel: 0271-354114, Fax: 351408 / **57234 Wilnsdorf**, Elektro Mutschler, Hauptstr. 18, Tel: 02739-3069, Fax: - 4699 / **58239 Schwerte**, HHKT Electronica J. Schlütz, Holzener Weg 79, Tel: 02304-82025, Fax: 86360 / **59457 Werl**, Mayer Elektro, Westdahlweg 2, Tel: 02922-3541, Fax: - 85382 / **61381 Friedrichsdorf**, Großkücheneinr. Hollmann, Bahnstr. 17a, Tel: 06172-5276, Fax: 75883 / **63150 Heusenstamm**, Heberer Electronic, Goethestr. 10, Tel: 06104-923704, Fax: 923705 / **63739 Aschaffenburg**, Reis Radio Fernsehen, Maximilianstr. 8, Tel: 06021-15177, Fax: - 15199 / **65239 Hochheim**, Norbert Schwamb GmbH, Eltvillerstr. 14, Tel: 06146-4085, Fax: - 4088 / **65627 Elbtal**, Rudi Wagner, Am Ohlenrod 10, Tel/Fax: 06436-3444 / **65931 Frankfurt**, Norbert Schwamb, nur telefonische Annahme: 069-371525 / **66117 Saarbrücken**, Hans Krempel Haustechnik, Zinzinger Str. 13, Tel: 0681-500850, Fax: 5008524 / **67549 Worms**, Hans Krempel Haustechnik, Müllerstr. 24, Tel: 06241-54224, Fax: - 54225 / **67663 Kaiserslautern**, Hans Krempel Haustechnik, Merkurstr. 6a, Tel: 0631-52078, Fax: - 52079 / **67680 Neuheimsbach**, Rudi Braun, Hauptstr. 10a, Tel: 06303-3524, Fax: - 5214 / **68309 Mannheim**, Hans Krempel Haustechnik, Heppenheimer Str. 23, Tel: 0621-737978, Fax: 722404 / **68309 Mannheim**, Electronic SVC Schaaf, Reichenbachstr. 21-23, Tel: 0621-727877, Fax: 7278750 / **68526 Ladenburg**, Salinger Elektro Service, Brauergasse 2, Tel: 06203-3341, Fax: - 16919

70329 Stuttgart, Elektro Herterich, Fruchstr. 11, Tel: 0711-4201780, Fax: - 426153 / **74564 Crailsheim**, Elektro Reu, Lange Str. 20-22, Tel: 07951-6019, Fax: - 6018 / **75236 Kämpfelbach**, Horst Frei, Goethestr. 19, Tel: 07232-1518, Fax: - 5238 / **76185 Karlsruhe**, Electronic Service Franke, Lotzbeckstr. 9, Tel: 0721-570070, Fax: - 5700736 / **76872 Winden**, Hans Krempel Haustechnik, Hauptstr. 103, Tel: 06349-8571, Fax: - 3390 / **78462 Konstanz**, Elektro Herterich, nur telefonische Annahmestelle: Tel: 07531-27923 / **78737 Fluorn-Winzeln**, Edmund Schneider, Schaffbaumstr. 9, Tel: 07402-482, Fax: - 8014 / **79115 Freiburg**, Electronic Service Franke, Wiesentalstr. 13, Tel: 0761-42671-72, Fax: - 42675 / **79650 Schopfheim**, R. Grossmann, Feldbergstr. 21, Tel: 07622-7673, Fax: - 61900

80339 München, Kesel & Schnitt, Schwanthaler Str. 110, Tel: 089-505802, Fax: - 5021596 / **82166 Gräfelfing**, Jung TV Service, Lohenstr. 14, Tel: 089-8545081, Fax: - 852413 / **85095 Denkendorf**, Reinhold Pfeiffer, Michlstr. 3, Tel/Fax: 08466-1319

85413 Hörgerhausen, Elektro Radlmaier, Schloßstr. 7, Tel: 08764-458, Fax: - 1228 / **85609 Aschheim**, Dieter Beise, Waldweg 9a, Tel: 089-9034005, Fax: - 9044859 / **86157 Augsburg**, Johann Haslinger, Stadtberger Str. 67, Tel: 0821-523125, Fax: - 526664

87439 Kempten, Radio Hartmann, Heiligkreuzer Str. 17, Tel: 0831-93231, Fax: 91319 / **89231 Neu-Ulm**, Markus Schneider, Gartenstr. 4, Tel: 0731-85897, Fax: - 74681 / **89564 Nattheim**, Elektro Oechsle GmbH, Fleinheimerstr. 49, Tel: 07321-71442, Fax: - 72341

90431 Nürnberg, Gehado SVC, Dottenheimer Str. 4, Tel: 0911-939740, Fax: 0911-3263378 / **91126 Schwabach**, Elektro & Elektronik KD, Limbacherstr. 81, Tel: 09122-84135, Fax: - 61677 / **91522 Ansbach**, Elektro Merk GmbH, Am Ring 17, Tel: 0981-89574, Fax: - 86715

93102 Pfatter, Franz Bernhard, Regensburgstr. 60, Tel: 09481-1505, Fax: - 8124 / **94130 Obernzell**, Elektro Service Schurig, Hameterstr. 31, Tel: 08591-2400, Fax: - 1285 / **96052 Bamberg**, Bernhard Jackl, Aronstr. 2a, Tel: 0951-39332, Fax: - 37423

97070 Würzburg, Wels GmbH, Untere Johannitergasse 16, Tel: 0931-355710, Fax: - 3557121 / **97318 Kitzingen**, K & M Hoffritz GmbH, Herrnstr. 46, Tel: 09321-4221, Fax: - 32185 / **98724 Neuhaus**, DLC Haustechnik GmbH, Eislefelder Str. 32, Tel: 03679-4651, Fax: - 2169 / **99096 Erfurt**, Ernst Grüsser, Goethestr. 14, Tel: 0361-5626519, Fax: - 5626519 / **99310 Arnstadt**, Elektro-Dienst GmbH, Nordstr. 3, Tel: 03628-75420, Fax: - 3498 / **99706 Sondershausen**, Biedermann & Köchel, Planplatz 8, Tel: 03632-50077, Fax: - 50077

99734 Nordhausen, Südharzer Dienstl. GmbH, Grimmellallee 40, Tel: 03631-2040, Fax: 3654 / **99817 Eisenach**, Blitz Electronic GmbH, Bahnhofstr. 17, Tel: 03691-77291, Fax: 72105

FRANCE

En cas d'une réclamation concernant une SHARP micro-onde, nous vous prions s'adresser à votre spécialiste ou à une adresse des SHARP Services suivantes.

A.A.V.I., 1, Rue du Mont de Terre, 59818 Lesquins Cedex, Phone: 20 86 20 30, Fax: 20 86 20 60 Service Dept. 02, 08, 59, 62, 80

ASYSTEC, P.A. Charles de Gaulle, 4 rue des Artisans, 95190 Goussainville, Phone: 97 83 07 41, Fax: 34 38 91 20, Service Dept. 60, 77, 93, 95

ATELIER ROUSSEL, 12, Bld Flandre Dunkerque, 56100 Lorient, Phone: 97 83 07 41, Fax: 97 87 02 36, Service Dept. 22, 29, 35, 44, 56

C.E.A.T.9, Rue de Venise, 21000 Dijon, Phone: 80 66 15 57, Fax: 80 67 12 36, Service Dept. 10, 21, 25, 39, 52, 58, 71, 89

C.M.T.S., 38, Rue des Ormeaux, 75020 Paris, Phone: 43 70 20 00, Fax: 43 70 36 46, Service Dept. 75, 77, 78, 91, 92, 93, 94, 95

C.T.E., Zone Tilly - 116 rte de Thionville, 57140 Woippy, Phone: 87 30 14 14, Fax: 87 30 85 07, Service Dept. 54, 55, 57, 67

ELECMA, 6 Bld Gueidon, 13013 Marseille, Phone: 91 06 22 56, Fax: 91 06 22 90, Service Dept. 13, 30, 34, 83, 84, 48, 26

M.E.C., 68 Rue de General Faicherbe, 37000 Tours, Phone: 47 66 00 30, Fax: 47 66 00 80 Service Dept. 16, 17, 18, 36, 37, 41, 45, 44, 49, 79, 85, 86, 87

M.R.T., 74, Rue Albert Einstein, 72021 Le Mans Cedex, Phone: 43 28 52 20, Fax: 43 24 93 81, Service Dept. 28, 41, 49, 53, 61, 72

ROSSIGNOL, ZI du Brezet Est, 6 rue P. Boulanger, 63100 Clermont Ferrand, Phone: 73 91 93 09, Fax: 73 92 28 79, Service Dept. 3, 15, 19, 23, 43, 63

SETELEC, 23, Rue du Chatelet, 76420 Bihorel les Rouen, Phone: 35 60 64 39, Fax: 35 59 93 48, Service Dept. 14, 27, 50, 76

S.T.E., 3, Chemin de l'Industrie, 06110 Le Cannet Rocheville, Phone: 93 46 05 00, Fax: 93 46 51 18, Service Dept. 04, 06

SERVICE ADDRESSES



S.T.V.S., 18, Rue Benoît Malon, 42000 Saint Etienne, Phone: 77 32 74 57, Fax: 77 37 45 29, Service Dept. 03, 07, 42, 43, 63
S.T.V.S., 10, Chemin Saint-Gobain, 69190 Saint Fons, Phone: 78 70 03 32, Fax: 78 70 86 61, Service Dept. 01, 38, 69, 71, 73, 74
TECH SERVICE, Batiment G Impasse Boudeville, 31100 Toulouse, Phone: 61 44 98 45, Fax: 62 14 16 13, Service Dept. 09, 11, 31, 32, 33, 40, 47, 64, 65, 66, 81, 82
TIMO VIDEO, 29 rue Elisabeth, 91330 Yerres, Phone: 69 48 04 80, Fax: 69 83 36 10, Service Dept. 28, 45, 77, 89, 912, 94
U.N.T.D., 1, Rue des Lourdines, 76000 Rouen, Phone: 35 72 28 04, Fax: 3573 18 32, Service Dept. 14, 27, 50, 76

BELGIUM

En cas d'une réclamation concernant une four a micro-onde SHARP, nous vous prions de vous adresser à votre spécialiste ou à une adresse des SHARP Services suivantes.

Indien uw magnetron problemen geeft kunt u zich wenden tot uw dealer of een van de onderstaande Sharp service centra.

AVTC, Kleine Winkellaan 54, 1853 Strombeek-Bever, Phone: 2674019, fax: 2679670,

ETS HENROTTE, Rue Du Campinaire 154, 6240 Farciennes, Phone: 396290, Fax: 391237

NEDERLAND

Indien uw magnetron problemen geeft kunt u zich wenden tot uw dealer of naar onderstaand Sharp Service Centrum.

SHARP ELECTRONICS BENELUX BV, Helpdesk -, Postbus 900, 3990 DW Houten, Telefoon: 030-6359635, Fax: 030-6377472

LUXEMBURG

Bei einer Reklamation Ihrer SHARP Mikrowelle wenden Sie sich bitte an Ihren Fachhändler oder an eine der nachfolgend aufgeführten SHARP SERVICE Niederlassungen

En cas d'une réclamation concernant une SHARP micro-onde, nous vous prions s'adresser à votre spécialiste ou à une adresse des SHARP Services suivantes.

Nouvelle Central Radio, Rue des Joncs, 15, 1818 Howald

SWITZERLAND

En cas d'une réclamation concernant une SHARP micro-onde, nous vous prions s'adresser à votre spécialiste ou à une adresse des SHARP Services suivantes.

Bei einer Reklamation Ihrer SHARP Mikrowelle wenden Sie sich bitte an Ihren Fachhändler oder an eine der nachfolgend aufgeführten SHARP SERVICE Niederlassungen.

NEL CASO SI VERIFICASSERO PROBLEMI ALLA VOSTRA APPARECCHIATURA: POTRETE RIVOLGERVI PRESSO UN NOSTRA CENTRO DI ASSISTENZA AUTORIZZATO SHARP

Restorex, Centre Uvrier/Magro, 1958 Uvrier/Sion, Tel: 027-331161 / **Amherd Albert AG**, Elektro, 3902 Brig-Glis, Tel: 028-235656

Eugene Max, Case postale 685, 1920 Martigny, Tel: 077-281686 / **Wirteshop R. Saurenmann**, Baarerstr. 57, 6300 Zug, Tel: 042-211327

Gebr. Kunz, Feldstr. 1a, 8942 Oberrieden, Tel: 01-7209293 / **Oberholzer & Co.**, Laupenstr. 8, 8636 Wald, Tel: 055-953295

KHM, Keller Hotelmasch AG, Alte Landstr. 12, 8600 Dübendorf, Tel: 01-8215205 / **Falkomat AG**, Allmendstr. 134, 4058 Basel, Tel: 061-6011919

Burri, Route de Seune 59, 1227 Carrouge, Tel: 022-3010366 / **Torre, Arts Menagers SA**, Rte. de Chene 80-82, 1208 Geneve, Tel: 022-7356550

Edmund Conrad, Höhe, 7431 Rongellen, Tel: 081-813544 / **Hanspeter Ebener**, Casannastr. 6, 7270 Davos-Platz, Tel: 081-465728

Meyer Gastro AG, Süsswinkel 7, 6004 Luzern, Tel: 041-513855 / **Aurora Service**, 31 Rue de l'Ecluse, 2000 Neuchatel, Tel: 038-242034

Bolt AG, Hauptstr. 1, 8586 Riedt/Erlen, Tel: 072-481466 / **Hollenstein & Co.**, Scheffelstr. 7, 9500 Wil, Tel: 073-234970

Isell & Albrecht, Münsteregg 22, 8200 Schaffhausen, Tel: 053-254433 / **Bürgi-Infra-Grill AG**, Gotthardstr. 66, 6410 Goldau, Tel: 041-822510

Gsell Roger, Via Carona 38, 6902 Paradiso, Tel: 091-545637 / **Mercatone SA**, 6928 Manno, Tel: 091-595001

Fredi Herger, Kirchstr. 28, 6454 Flüelen, Tel: 044-23089 / **Stirnimann AG**, Landstr. 122, 5430 Wettingen, Tel: 056-263538

Franz Kaufmann, Schwabistalstr. 90, 5037 Mühlen, Tel: 064-432551 / **Paul Lüscher**, Bottenwilerstr. 143, 5053 Staffelbach-Witwil, Tel: 064-811021

Licaga, Marcus Gautschi, Oberfeldstr. 342, 5722 Gränichen, Tel: 064-313634 / **Industrielle Betriebe der Stadt Aarau**, Obere

Vorstadt 37, 5000 Aarau, Tel: 064-210318

Gerard Kopp, Mooshaldenstr. 9050 Appenzell, Tel: 071-873438 / **Rolf Gerber AG**, Berchtoldstr. 37, 3012 Bern, Tel: 031-237676

Rolf Kämpf, Aalmattenweg 36, 2560 Nidau, Tel: 032-516087 / **Intermatic**, Höhweg 195, 3800 Interlaken, Tel: 036-220015

Elektro Aeschmann AG, Kanalpromenade 16, 3800 Interlaken, Tel: 036-227777 / **Elektrohaus von Allmen AG**, Gsteigstr., 3780

Gstaad, Tel: 030-41464 / **PAVA**, Paul von Arx, Ostringstr. 16, 4702 Oensingen, Tel: 062-761976

ÖSTERREICH

Bei einer Reklamation Ihrer SHARP Mikrowelle wenden Sie sich bitte an Ihren Fachhändler oder an eine der nachfolgend aufgeführten SHARP SERVICE Niederlassungen.

Manfred Mayer GmbH, Stipckgasse 6, 1234 Wien, Phone: 222-6093120, Fax: 222-693629 / **Karl Rother**, Simmeringer Hauptstr.

11, 1110 Wien, Phone: 222-7498432, Fax: 222-7498838 / **Roland Göschl**, Bayerhamerstr. 12c, 5020 Salzburg, Phone: 662-882307, Fax:

662-881926 / **Micro Electronics**, Goldschlagstr. 64, 1150 Wien, Phone: 222-9832244, Fax: 222-9832246 / **Franz**

Schuhmann, Gablonzerweg 18, 4030 Linz, Phone: 732-382280, Fax: 732-3822808 / **Arnold Moser**, An der Heufurt 28, 6900

Bregenz, Phone: 5574-75777, Fax: 5574-75777 / **Josef Resch**, Leopoldstr. 57, 6020 Innsbruck, Phone: 512-561766, Fax: 512-584546 /

Scheuermann, Rennsteinerstr. 8, 9500 Villach, Phone: 4242-21174, Fax: 4242-21174 / **Pichler**, Am Wagrain 342, 8055 Graz, Phone: 316-

291292, Fax: 316-291292 / Audio Video Service, 9020 Klagenfurt, Phone: 463-43114, Fax: 463-43113

ITALIA

NEL CASO SI VERIFICASSERO PROBLEMI ALLA VOSTRA APPARECCHIATURA POTRETE RIVOLGERVI PRESSO UN NOSTRO CENTRO DI ASSISTENZA AUTORIZZATO SHARP

Livolsi Fausto, Via Casella 37, 20156 Milano, Phone: 02-39215576, Fax: 02-39210854 / **Rota G.**, Via Martinella 65, 24020 Torre

Boldone (BG), Phone: 035-344492 / **ServiceTVA**, Via Vergnano 59, 25127 Brescia, Phone: 011-2296000, Fax: 011253921 / **Tre Esse**, Via

M. Coppino 96/e, 10147 Torino, Phone: 011-2296000, Fax: 011-253921 / **Gruar**, C. So Europa 454, 16148 Genova, Phone: 010-380671,

Fax: 10-3991351 / **Top Service**, Via Latemar 10/12, 39100 Bolzano, Phone: 0471-970221 / **Campi**, Via Noalese 87, 31100 Treviso,

Phone: 0422-436245, Fax: 0422-435996 / **Video Service**, Via Vitruvio 11, 37100 Verona, Phone: 045-566299, Fax: 045-573865

Video Hi-fi, Via Longhi 16 a/b, 40128 Bologna, Phone: 051-360986, Fax: 051-366863 / **Aerre Digit**, Via Marbellini 10/12, 50127



SERVICE ADDRESSES

Firenze, Phone: 055-410874, Fax: 055-411490 / **Saec di Coppa**, Via Rinchiostra Nord 34, 54100 Massa, Phone: 0585-251724, Fax: 0585-791177 / **Technoconsult**, Via Mad. Alta 185, 06100 Perugia, Phone: 075-5003089 / **Electronica Laser**, Via Sacripanti 36/38, 60125 Ancona, Phone: 071-2866075, Fax: 071-2864460 / **C.G.M.**, Via Zenodossio 49, 00176 Roma, Phone: 06-2751026
Tecno Labs, Via Naz. Delle Puglie 294, 80026 Casoria (NA), Phone: 081-5845923 / **Marcantonio**, Via G.M. Giovene 45, 70124 Bari, Phone: 080-5618029 / **Audio Video**, Via A. de Gasperi 44, 88018 Vibo Valentia, Phone: 0963-45571/2 / **A.V.S.**, Via Sassari 2/c, 95100 Catania, Phone: 095-446696, Fax: 095-434337 / **AS. TEC.**, Via R. Villasanta 227, 09100 Cagliari, Phone: 070-524153, Fax: 070-504109

ESPAÑA

En caso de una reclamación con vuestra SHARP Microwave, preguntan por favor la casa dónde han comprado su máquina o infórmanse en una de las SHARP Service casas siguientes.

ANDALUCÍA

Electro Vitel, C.B., Poeta Paco Aquino, 51, 4005 Almería, Phone: 950-229755, Fax: 950-222520 / **Televideo**, Ruescas 7, 04770 Adra, Phone: 950-401863, Fax: 950-401863 / **Electronica Leon**, Cruz Roja Española, 11, 11009 Cádiz, Phone: 956-201417, Fax: 956-258722 / **Jose Borja y Jose Arana**, San Antonio 31, 11201 Algeciras, Phone: 956-666053 / **Electronica Jeda**, Divina Pastora, edif. 1, local 4, 11402 Jerez de la Frontera, Phone: 956-336499 / **Electronica Jeda**, Jiménez Sandoval 3, 11500 Pto. Sta. María, Phone: 956-864606
Teodoro Duenas Canas, Hermano Juan Fernández, 15, 14014 Córdoba, Phone: 957-263506 / **Electronica Wenceslao**, Fontiveros 42A, 18008 Granada, Phone: 958-811616, Fax: 958-126399 / **Telefonid**, Dr. Fco. Vázquez Limón 4, 21002 Huelva, Phone: 955-243860, Fax: 955-243982 / **Electro Himega**, S.A., Adarves Bajos 4C, 23001 Jaén, Phone: 953-254256 / **Biser**, S.L., Lozano de Torres 8, 29013 Málaga, Phone: 952-255553 / **Vanhcolor**, S.L., San Jacinto, 96, 41010 Sevilla, Phone: 95-4338303, Fax: 95-4339861 / **Auvitel**, S.L., Pedro Pérez Fernández, 15A, 41011 Sevilla, Phone: 95-4275705, Fax: 95-4275706

ARAGÓN

Servielectro, S.C.L., Baltasar Gracián, 5, 22002 Huesca, Phone: 974-210014 / **Elect. Sanchez Gracia**, S.L., Muñoz Degraín 15, 44001 Teruel, Phone: 974-602706
Elecca, C.B., Masén Romualdo Soler, 4, 44600 Alcaniz, Phone: 974-832677, Fax: 974-832677 / **Antonio Cinca Monterde**, Via Universitat 52, 50010 Zaragoza, Phone: 976-316965

ASTURIAS

Casilda Alvarez Olivar, San José, 12, 33003 Oviedo, Phone: 985-223739 / **Setel C.B.**, Cean Bermúdez 9, 33208 Gijón, Phone: 985-391911

BALEARES

Maes, S.L., Son Nadal, 63 B, 07008 Palma de Mallorca, Phone: 971-274947, Fax: 971-249458 / **Audio Imagen**, Vicente Serra 21, 07800 Ibiza, Phone: 971-314659 / **Reparaciones Ortega**, Via Púnica, 33 bajos, 07800 Ibiza, Phone: 971-890155 / **Insat**, Pintor Calbó, 07703 Mahón, Phone: 971-365318

CANTABRIA

Seyma, Juan José Pérez del Molino, s/n, 39001 Santander, Phone: 942-236919, Fax: 942-371954

CASTILLA LA MANCHA

Juman Serv. Técnicos, C.B., Doctor Fleming, 3, 02004 Albacete, Phone: 967-224078, Fax: 967-501831 / **Electronica Lara**, Jara 11, 13002 Ciudad Real, Phone: 926-211787 / **Electronica Arellano**, Corredera, 8, 13600 Alcazar de San Juan, Phone: 926-541839, Fax: 926-541839
Rafael Diaz, Manuel Fernández Puebla, 7, 13300 Valdepenas, Phone: 926-322324 / **Electronica Garcia**, Ramón y Cajal, 17, 16004 Cuenca, Phone: 966-211871, / **Martinez Viejo C.B.**, Capitán Boixareu Rivera 51, 16004 Guadalajara, Phone: 911-232763 / **Electronica Rivas**, Barrio San Juan, 1, 19001 Talavera de la Reina, Phone: 925-805546 / **Electronica Fe-Car**, S.L., Avda Santa parbara, 30, 45600 Toledo, Phone: 925-212145, Fax: 925-216827

CASTILLA Y LEÓN

Electronica Gredos, Eduardo Marquina, 24, 05001 Ávila, Phone: 920-224839 / **Servitec**, Lavaderos 7-9, 09007 Burgos, Phone: 947-224168, Fax: 947-216232 / **J.M. Hernandez Rodriguez**, Plaza de los 12 Mártires, 5, 29004 León, Phone: 987-203410 / **Electronica Javier**, Ramírez, 5, 34005 Palencia, Phone: 988-750374, Fax: 988-750433 / **Almat Electronica**, Galileo, 21, 37004 Salamanca, Phone: 923-224508 / **Taller Electronico Guijo**, Ramón y Cajal, 1, 40002 Segovia, Phone: 911-429418 / **Teco**, Zapatería, 25, 42002 Soria, Phone: 975-226125 / **Teleservicios**, Esqueva 6, 47003 Valladolid, Phone: 983-309261 / **Velasco RTV**, C.B., Cuba, 35, 49005 Zamora, Phone: 988-521170

CATALUNYA

Electro Adra, Balmes, 160, 08008 Barcelona, Phone: 93-2172542 / **4 En 1 Reparaciones**, Taquígrafo Martí, 19, 08028 Barcelona, Phone: 93-4309726 / **B. Avda**, Morera, 5-7, 08915 Badalona, Phone: 93-4652200, Fax: 93-4643336 / **Servinters**, Plaza Casagemes 20, 08911 Badalona, Phone: 93-3894460, Fax: 93-3841765 / **Mateos Electronica**, Ctra. de Caldas 76, 08400 Granollers, Phone: 93-8492877, Fax: 93-8463035 / **Estarlich**, Sant Antoni, 186, 08370 Calella, Phone: 93-7662233 / **Elde**, Bruc, 55, 08240 Manresa, Phone: 93-8728542 / **Radio TV Vilaret**, Moli del Vent, 21, 08303 Mataró, Phone: 93-7980248 / **Ce.Va.Sat**, Pa Rubio i Ors, 105, 08203 Sabadell, Phone: 93-7107613 / **Ce.Va.Sat**, S.C., Ctr. Matadepera, 87, 08225 Terrassa, Phone: 93-7855111 / **Laurea Sat, Guillerries**, 20, 08500 Vic, Phone: 93-8890248 / **Tecnotele**, Misser Rufet, 2, 08720 Vilafranca del Penedès, Phone: 93-8903591, Fax: 93-8172184
Rafael Garcia, Pere Comte 11, 17005 Girona, Phone: 972-235861 / **Juan Salleras Puig**, Pou Artesia, 4, 17600 Figueras, Phone: 972-506754 / **Riera Daviu**, Torres i Bages 19, 17600 Figueras, Phone: 972-503264 / **Satel**, Paseig de Barcelona, 12, 17800 Olot, Phone: 972-265519 / **Cristel**, Vallcaient 32, 25006 Lleida, Phone: 973-270826 / **Ielsa**, Tarragona, 40, 25005 Lleida, Phone: 973-247127
Juan Sanchez Rojas, Avda. Catalunya 41, 25300 Tàrraga, Phone: 973-311573 / **Sertecs**, S.C., Caputxins, 22 bxos., 43001 Tarragona, Phone: 977-221851 / **Electronica Coca**, Lepanto 16-18, 43202 Reus, Phone: 977-322489 / **Fco. Martorell Altes**, Reseta Mauri, 10 bxos, 43205 Reus, Phone: 977-753241 / **Electronica Boix**, Calderón de la Barca 3, 43520 Roquetes, Phone: 977-512120 / **Electro Servei**, C.B., Paseig

SERVICE ADDRESSES



Moreira, 8, 43500 Tortosa, Phone:977-445355

EXTREMADURA

Electronica Bote, Plaza Portugal, 2, 06001 Badajoz, Phone:924-221740 / **Antonio Munoz Vazquez**, Canovas del Castillo, 16, 06800 Merida, Phone: 924-300785 / **Jose Ruiz Garcia**, Ecuador, 5B, 10005 Caceres, Phone: 927-224886, / **Fco. Gonzalez Centeno**, Avda. del Zafra 1, 06310 Puebla de Sancho Perez, Phone:924-552703,Fax:924-553308 / **Arsenio Sanchez**, Tornavacas 9, 10600 Plascencia, Phone: 927-411121

GALICIA

Servicios Tecnicos Mendez, Gil Vicente, 13 B, 15011 La Coruna, Phone: 981-275252 / **Talleres Instaluz**, Juan Florez 110, 15005 La Coruna, Phone:981-268026 / **Electronica Penelo**, Sierra Ganidoira 63 bjos, 27004 Lugo, Phone: 982-214743 / **Televexo**, Canabal, s/n, 27880 Burela, Phone:982-581857
Electronica Fouces, Benito Vicetto 34, 27400 Moforte de Lemos, Phone: 982-402438 / **Sevys**, General Aranda, 35, 32001 Orense, Phone:988-212272 / **Imason**, Laureiro Crespo 43, 36004 Pontevedra, Phone:986-841636 / **Central de Servicios**, Asturias, 10, 36206 Vigo, Phone: 986-374745 / **Alvimo**, conde Torrecedeira 92, 36202 Vigo, Phone:986-299331, Fax:986-294743

LA RIOJ

Roberto Aguado Gil, Avda. Viana, 10, 26001 Logrono, Phone:941-252553 / Top Service, Achutegui de Blas 17 bjos, 26500 Calahorra, Phone: 941-135035

COMUNIDAD DE MADRID

Elbeservi, S.A., Pza. Puerto de la Cruz, 8 post., 28029 Madrid, Phone:91-3861601,Fax: 91-7302711 / **Electronica Ansar**, Tomasa Ruiz 4, 28019 Madrid, Phone: 91-4604745, Fax: 91-4604825 / **Garman**, C.B., Mandarina, 15, 28027 Madrid, Phone: 91-3680179, Fax: 91-3680180 / **Sertecun**, Bedel 6, 28801 Alcala de Henares, Phone: 91-8890032, Fax: 91-8892640 / **Variosat**, Isla de Córcega, 24, 28100 Alcobendas, Phone: 91-6620468 / **Gomescan**, Plza. del Jubilado 8, 28042 Barajas, Phone: 91-3054890, Fax:91-3058490 / **Tec-Norte**, S.C., Santiago Apóstol, 12, 28400 Villalba, Phone:91-8516347

MURCIA

Electroservicios Seba, C.B., Ronda Norte, 3 bajos, 30009 Murcia, Phone:968-298593 / **Electro Servic.** Plaza, Gómez Cortina, s/n, 30005 Murcia, Phone: 968-284567 / **Reg, C.B.**, Antonio Oliver, 17, 30290 Cartagena, Phone:968-510006 / **Raimundo Caro Porlan**, José Mouliáa 45, 30800 Lorca, Phone: 968-461811

NAVARRA

Telsan, C.B., Gayarre, 16, 31005 Pamplona, Phone: 948-241950 / **Unitec**, Fte. Canonigos 5, 31500 Tudela, Phone: 948-827434

PAIS VASCO

Servitele, Autonomia, 24 galerias, 48012 Bilbao, Phone:94-4448902 / **Daniel Negredo**, Padre Pernet 8, 48004 Bilbao, Phone:94-4112282 / **Onofre Collantes**, Ortuno Alango, 7, 48920 Portugalete, Phone:94-4832122 / **Estudios 3**, Pza. de los Estudios 3, 20011 San Sebastian, Phone:943-453797 / **Reparaciones Urrutis**, Paseo Aintzieta, 32, 20014 San Sebastian, Phone:943-458410 / **Teknibat Electronica**, Zezenbide 4, 20600 Eibar, Phone: 943-702437 / **Jose Ant Merino Nicolas**, Avda. Judizmendi, 24, 01003 Vitoria, Phone: 945-251892

VALENCIA

Angel Avellan Sempere, Poeta Quintana, 13, 03004 Alicante, Phone: 96-5213255 / **Electronica Eler**, Pinoso 8, 03012 Alicante, Phone: 96-5256332
Tele Color, Del Vent, 9, 03500 Benidorm, Phone:96-5852460 / **Electronica Gomez**, Baltasar Tristany 100, 03201 Elche, Phone: 96-5467581
Asiste, S.L., Pintor López, 43 bajos, 12004 Castellon, Phone:964-215769 / **Francisco Carceller**, Carrero 29, 12116 Vinaros, Phone:964-454465
Servic. Electronicos, Doctor Olóriz 3, 46009 Valencia, Phone:96-3402034 / **Antonio Monleon**, Avda. de la Plata, 91, 46006 Valencia, Phone: 96-3345587 / **Envisa Electronic**, Júcar 50, 46600 Alzira, Phone:96-2412487 / **Telereparaciones Moncho**, Pare Pasqual Catalá, 5, 46700 Gandia, Phone:96-2872329 / **Tecno Hogar**, Dos de Mayo 41, 46700 Gandia, Phone:96-2865335

FINNLAND

JOS TEILLÄ ON JOTAIN HUOMAUTETTAVAA MIKROAALTOUUNISTANNE OLKAA HYVÄ JA OTTAKAA YHTEYS MYYJÄÄN TAI VALTUUTETTUUN SHARP HUOLTOON:

Tehovideo Oy, Kuortaneenkatu 7, 00520 Helsinki, Phone:09-1461500, Fax: 09-1461767 / **Tehovideo Oy**, Lukkosepänkatu 6, 20320 Turku, Phone: 02-2546822, Fax:02-2546856

SWEDEN

Vid förfrågningar angående din mikrovagsugn var vänlig kontakta din återförsäljare eller någon av Sharps representanter.

Centralservice Umea, Sandbackavägen 3, 903 46 Umea, Phone: 090-125001, Fax: 090-131135 / **Servicegruppen AB**, Kopparbergsgatan 2, 200 43 Malmö,Phone:040-967300,Fax: 040-923400 / **MN Elektronikservice AB**, Flygplatsintarten 10A, 161 11 Bromma, Phone: 08-6275900, Fax:08-6275160 / **Jönköpings Antenn & TV Service**, Fridhemsvägen 20, 553 02 Jönköping, Phone: 036-161690, Fax: 036-160211 / **Ratronic Radio & TV Service**, Nordlandergatan 15, 931 32 Skellefteå, Phone: 0910-17305, Fax: 0910-16844 / **Servicegruppen**, Ekslingan 10, 25467 Helsingborg, Phone: 042-202960, Fax:042-202797 / **Tomi Elektronik AB**, Bäckvägen 90, 126 47 Hågersten, Phone: 08-186170, Fax: 08-186175 / **Tretronik**, Östermovägen 33, 854 62 Sundsvall, Phone: 060-155925, Fax: 060-173690 / **TV-Trim Service AB**, S:T Pauligatan 37, 416 60 Göteborg, Phone: 031-847200, Fax: 031-847500

ICELAND

Ef þú hefur einhverjar kvartanir vardandi örbylgjuofninn pinn, þá vinsamlegast hafðu samband við söluadila örbylgjuofnsins, eða einhvern af eftirtöldum Sharp þjónustuaðilum.

Skrifbaer H.F., Hverfisgötu 103, 101 Reykjavík, Phone: 1-624215, Fax: 1-627252

DENMARK

Ved reklamationer vedrørende Deres mikrobølgeovn, bedes De venligst kontakte Deres forhandler eller en de nedennævnte SHARP Service-Centre.

ENGLISH



SERVICE ADDRESSES

Scandia Service A/S, Arnold-Nielsens-Blvd. 142, 2650 Hvidovre, Phone: 36-771221, Fax: 31-490522

UNITED KINGDOM

In case of any complaint regarding your microwave-oven, please contact your dealer or the following SHARP Service branch.

Customer Help Desk, Phone: 0345-125387

PORTUGAL

Abel Trindale Barreto, Estrada S.Joao da Carreira, 3500 Viseu / **Cenatel Ltd.**, R.Manuel Pinto Azevedo 727, 4100 Porto / **Cenatel Ltd.**, Parada do Alto de S.Joao 17A, 1900 Lisboa / **Correia & Teixeira Ltd.**, Bairro da Coxa, Rua N, Lt. 15R/C DT, 5300 Braganca / **Electricidade Geral**, Av. Rocha Paris 152, 4900 Viana Castelo / **Electro Bal**, R. Antonio Jose Batista 39-C, 2900 Setubal / **Electro Benardino**, R. Batalha Reis 71, 6300 Guarda / **Electro Marto Ltd.**, R. Paulo VI, 35-A, 2400 Leiria / **Morgado & Pereira Ltd.**, Qlt. Ramalhao-Arm 3, V.N. de Cima, 5000 Vila Real / **Polihertz Ltd.**, Largo Sr. da Piedade, 2, 6000 Castelo Branco / **Pombalgaz**, R. Albergaria dos Doze, 15, 3100 Pombal / **Raditecnics**, Quinta da Horta, Lt. 7 Lj.F, 8500 Portimao / **Tecnicaldas**, R. Vicente Paramos, 27-B, 2500 Caldas da Rainha / **Tecnovideo**, R. Combatentes G. Guerra, 72-B, 3000 Coimbra

SHARP

SHARP ELECTRONICS (EUROPE) GMBH.
Sonninstrasse 3, 20097 Hamburg
Germany

Gedruckt in Grossbritannien
Imprimé au Royaume-Uni
Gedruckt in Groot-Brittannie
Stampato in Gran Bretagna
Impreso en el Reino Unido
TINS - A072URRO